


MOUNTING INSTRUCTIONS FOR SPLIT TAPER BUSHINGS

in


Browning® Split Taper Bushed
Products

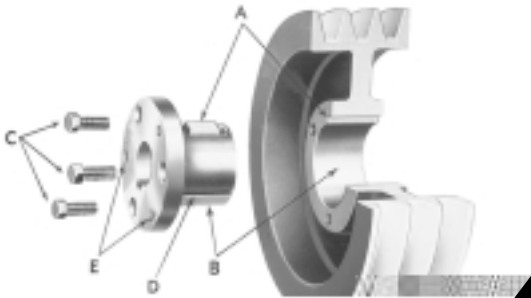

BEFORE INSTALLATION:

1. Make sure the shaft, bushing barrel & bore, BRUSHING® bushed product bore, keys and keyways are clean and free of oil, dirt, etc. For idler bushings, make sure the bushing is properly aligned with the BRUSHING® split taper bushed product bore are

	W

	<div><div> WARNING</div><div>Operating drives without guards in plac</div></div>
--	--